


K3 图册



EN-FIG 1:

DESCRIPTION


NO.	CODE	DESCRIPTION		QTY.	
1	GB/T5787-1986	螺栓 M8X30	Bolt M8X30	6	
2	QJ168QDJ.01-01	曲轴箱盖	Cover,Crankcase	1	
3	JF142F.8-5	油标尺密封垫	Waasher,Seal	2	
4	QJ168QDJ.01-04	机油标尺	Guage,Engine Oil	2	
5	QJ168QDJ.01-03	加油口螺塞	Cover,Supply Oil Mouth	1	
6	157. 3-8	定位销 8x14	Guide, Dowel (8x14)	2	
7	QJ168QDJ. 01-02	曲轴箱垫片	Spacer, Crankcase	1	
8	QJ168QDJ. 01. 01	油封 25X41. 25X6	Oilseal Assy 25X41. 25X6	2	
9	GB/T276-1994	轴承 6025/P53	Bearing6025/P53	2	
10	QJ166QDK. 01-07	放油螺塞垫片	Spacer, Drain Plug	2	
11	QJ166QDK. 01-06	放油螺塞	Drain Plug	2	
12	JF168FLH-16. 01. 01	曲轴箱部件 (电启动)	Crankcase Assy	1	
13	GB/T5789-1986	螺栓 M6X30	Bolt M6X30	1	
14	157. 4-6	定位销 10x14	Guide, Dowel (10x14)	2	

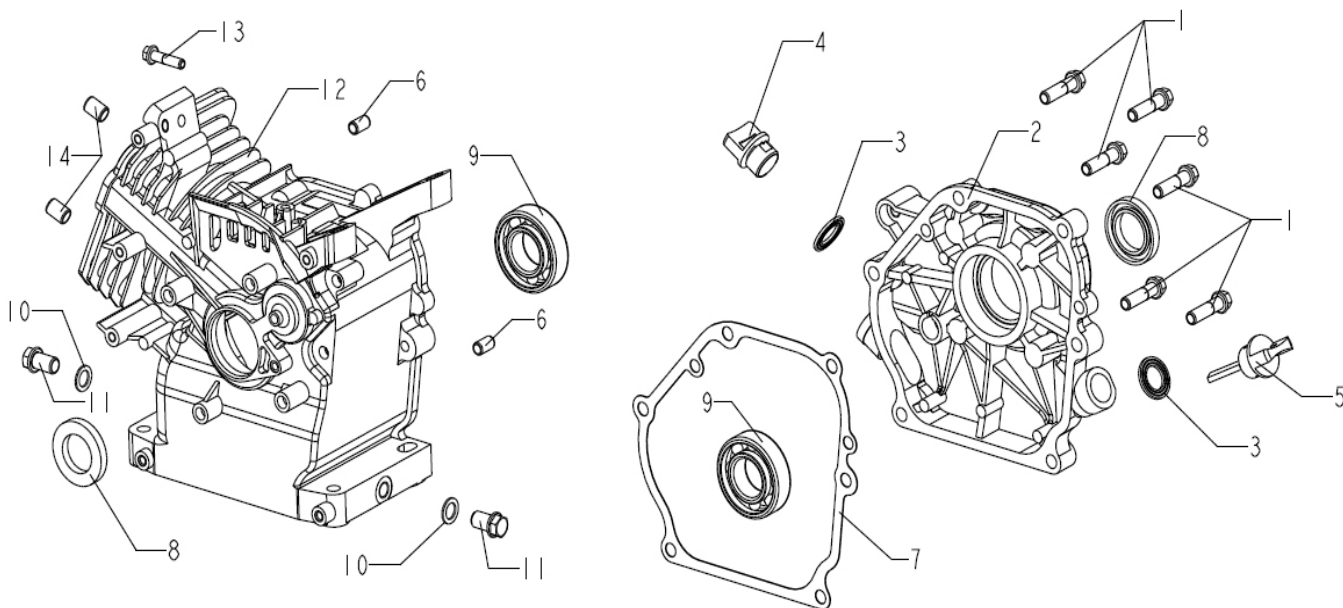

En-Fig 2:

CYLINDER HEAD ASSY.


NO.	CODE	DESCRIPTION		QTY.	
1	QJ168QDL. 02-01	气缸盖垫片	Spacer Assy, Cylinder Head	1	
2	GB/T5787-1986	M8X60 缸盖螺栓	M8X60Bolt, Cylinder Head	4	
3	QJ168QDL. 02. 01	气缸盖机械加工组件	Cylinder Head	1	
4	QJ168QDJ. 02-04	进气口垫片 1	Spacer 1	1	
5	QJ168QDJ. 02-02	化油器隔热板	Mattress, Heat Insulating	1	
6	QJ168QDJ. 02-05	进气口垫片 2	Spacer 2	1	
7	QJ168QDJ. 02-03	进气口螺柱	Bolt, Intake Pipe	2	
8	GB/T6177-2000	M6 螺母	Nut M6	2	
9	QJ168QDJ. 02-06	气缸盖罩垫片	Spacer, Seal	1	
10	QJ168QDJ. 02. 03	气缸盖罩部件	Clipboard	1	
11	GB/T5789-1986	螺栓 M6X14	Bolt M6X14	4	
12	QJ168QDJ. 02-01	排气口垫片	Spacer, Exhaust Pipe	1	
13	QJ168QDJ. 02-07	排气口螺柱	Bolt, Exhaust Pipe	2	
14	GB/T6170-2000	螺母 M8	Nut M8	2	
15	QJ1E50FMG. 1. 2	火花塞 F7RTC	(F7RTC) Spark Plug	1	

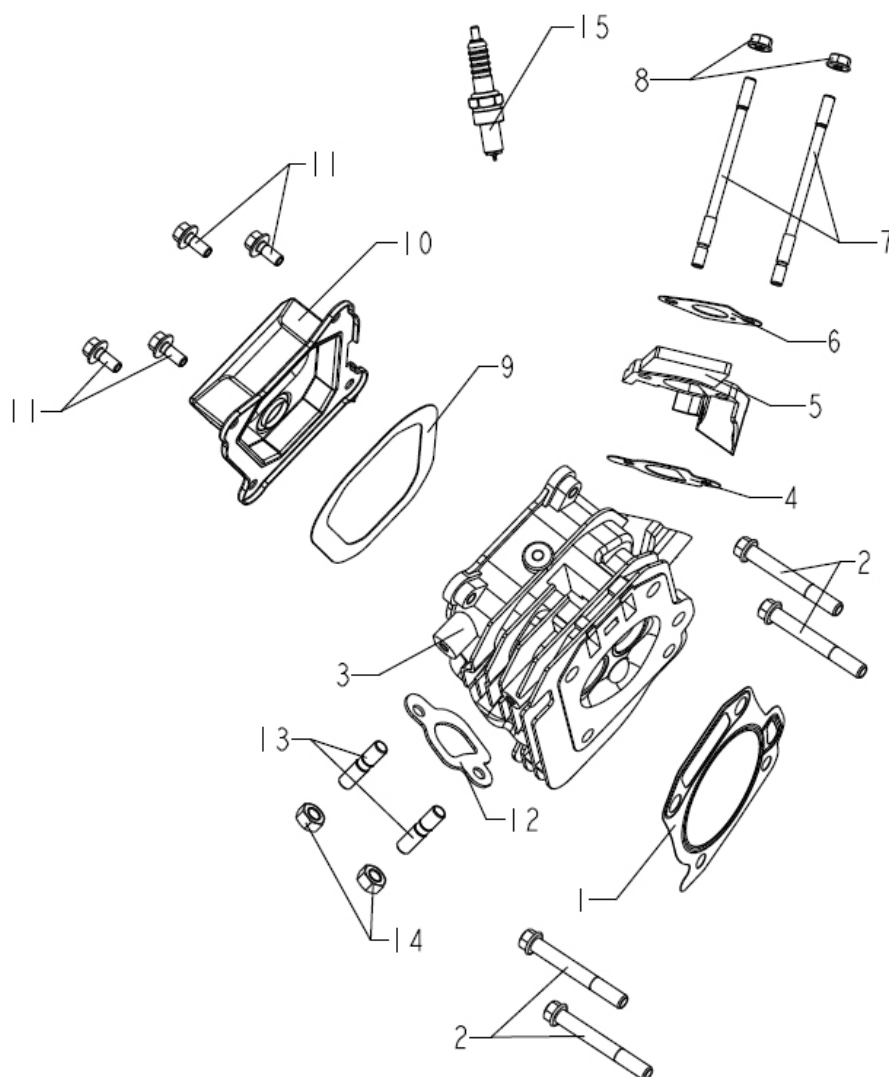

En-Fig 3:

INTAKE EXHAUST MECHANISM ASSY


NO.	CODE	DESCRIPTION		QTY.	
1	QJ166QDK. 03-11	气门间隙调整螺母	Adjusting Nut, Valve Clearance	2	
2	QJ182QDP. 03-07	摇臂球头	Buttonhead, Arm	2	
3	QJ168QDJ. 03-09	摇臂	Arm	2	
4	J168QDJ. 03-02	排气门杆帽	Cap, Exhaust Door Rod	1	
5	QJ168QDJ. 03-10	排气门弹簧上座	Upper Retainer, Exhaust Door Spring	1	
6	QJ168QDJ. 03-07	气门弹簧	Spring, Valve	2	
7	QJ168QDJ. 03-05	排气门	Valve, Exhaust	1	
8	QJ168QDJ. 03. 04	挺杆导向片	Guide Plate, Connecting Stud	1	
9	QJ168QDJ. 03. 02	挺杆	Rod, Connecting	2	
10	QJ168QDJ. 03-08	进气门弹簧上座	Upper Retainer, Intake Door Spring	1	
11	QJ182QDP. 03-04	气门间隙调整螺柱	Adjusting Stud, Valve Clearance	2	
12	QJ168QDJ. 03-06	进气门	Valve, Intake	1	
13	QJ168QDL. 03-01	挺柱	Stud, Connecting	2	
14	QJ168QDL. 03. 01	凸轮轴部件	Camshaft	1	
15	QJ168QDJ. 03. 03	气门油封	Oilseal, Valve	1	

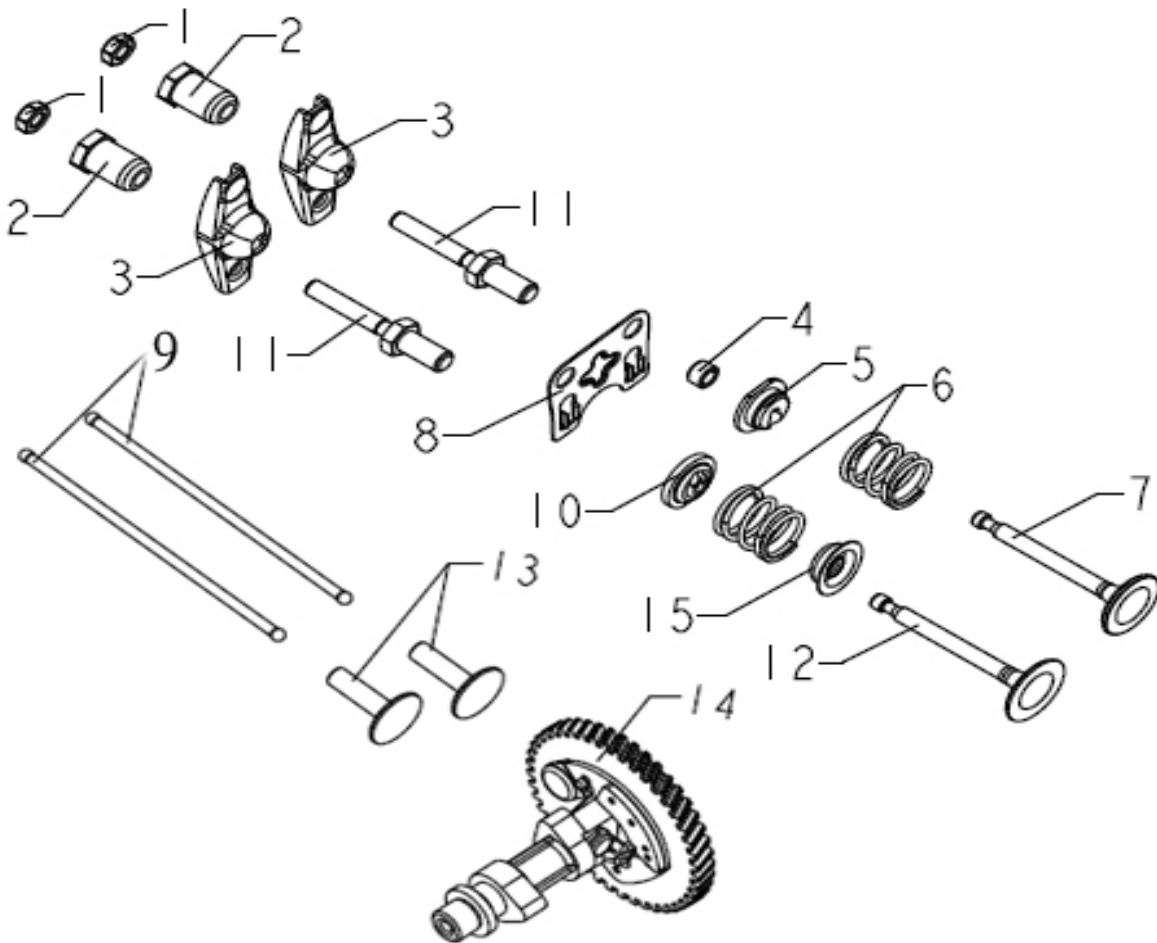

En-Fig 4:


BRANCE FLYING WHEEL

NO.	CODE	DESCRIPTION		QTY.	
1	QJ168QDJ. 04-06	压紧螺母	Nut, Clamp	1	
2	QJ168QDJ. 04-10	起动齿轮	Ratchet Wheel	1	
3	QJ168QDJ. 04-11	风扇	Fan	1	
4	JF168FJH-5. 02. 01	飞轮	Flying Wheel	1	
5	QJ182QDP. 04-03	键	Key	1	
6	QJ168QDJ. 04-09	调速驱动齿轮	Driven Gear, Adjusting	1	
7	JF168FLH-8B. 04-01	曲轴	Branche	1	
8	QJ168QDJ. 04-08	正时齿轮	Gear, Crankshaft Timing	1	
9	QJ168QDJ. 04-05	活塞销挡圈	Circlip, Piston Pin	2	
10	QJ168QDL. 04-01	活塞	Piston	1	
11	QJ168QDJ. 04-02	第一道环	Ring, First	1	
12	QJ168QDJ. 04-03	第二道环	Ring, Second	1	
13	QJ168QDJ. 04. 01	油环部件	Oil Ring Assy	1	
14	QJ168QDJ. 04-04	活塞销	Pin, piston	1	
15	QJ168QDJ. 04. 02-01	连杆体	Rod, Connecting	1	
16	QJ166QDK. 05. 02-03	连杆螺栓	Bolt, Connecting Rod	2	
17	QJ168QDJ. 04. 02-02	连杆盖	Cover, Connecting Rod	1	
18	QJ168QDJ. 04. 02	连杆部件	Connecting Rod Assy	1	

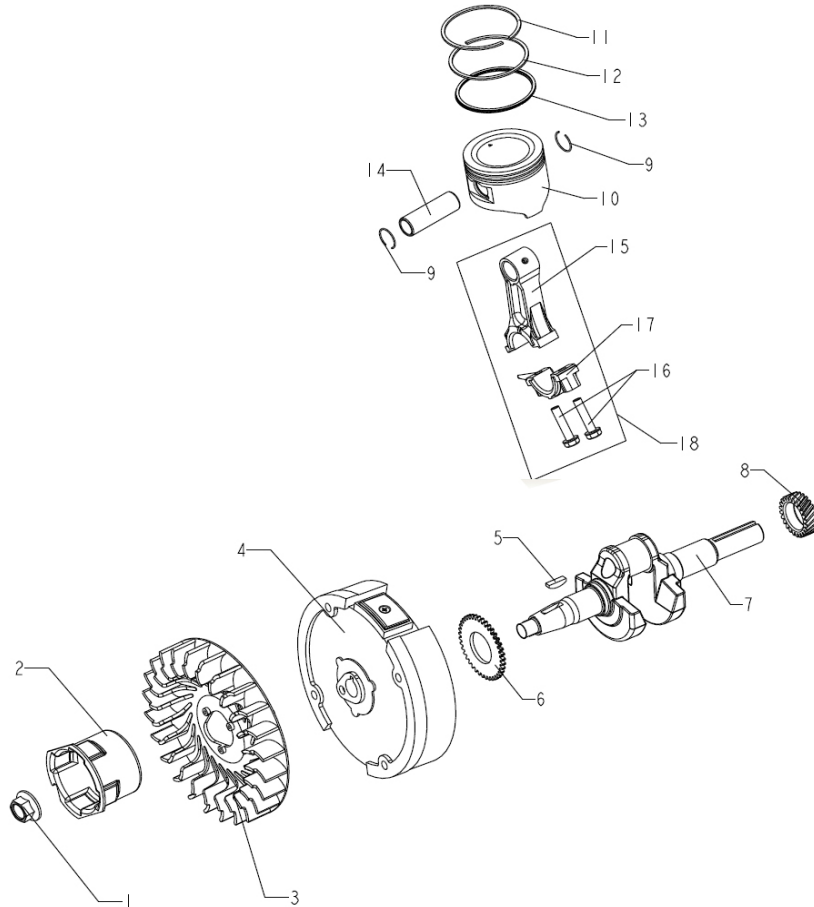

En-Fig 5: CENTRIFUGAL ADJUSTMENT ASSY


NO.	CODE	DESCRIPTION		QTY.	
1	QJ168QDJ. 05-01	拉杆	Arm	1	
2	QJ168QDJ. 05-07	钢丝拉杆	Rod Tension	1	
3	QJ168QDJ. 05-06	小拉簧	Spring 2, Tension	1	
4	GB/T6177-2000	螺母 M6	Nut	1	
5	QJ182QDP. 06-03	方头螺栓	Bolt, Square	1	
6	QJ168QDJ. 05-09	垫片 2	Spacer 2	1	
7	QJ182QDP. 06-02	卡簧	Circlip	1	
8	QJ168QDJ. 05-03	拨叉	Fork	1	
9	QJ166QDK. 06-03	垫片 1	Spacer 1	1	
10	QJ168QDJ. 05-04	销轴	Pin	1	
11	QJ166QDK. 01-02	卡簧	Circlip	1	
12	QJ168QDJ. 05. 02-01	离心调速器体	Adjustment, Centrifugal	1	
13	QJ168QDJ. 05. 02-03	离心块	Block, Centrifugal	2	
14	QJ168QDJ. 05. 02-02	销	Pin	2	
15	QJ168QDJ. 05-08	垫片 3	Spacer 3	1	
16	QJ168QDJ. 05-02	推杆套	Cover, Push Rod	1	
17	JF168FJH-7. 03-01	大拉簧	Spring 1, Tension	1	
18	GB/T5789-1986	螺栓 M6*10	Bolt	2	
19	JF168FJH-7. 03. 01	手柄部件	Handle Assy	1	
20	GB/T5789-1986	螺栓 M6*25	Bolt	1	

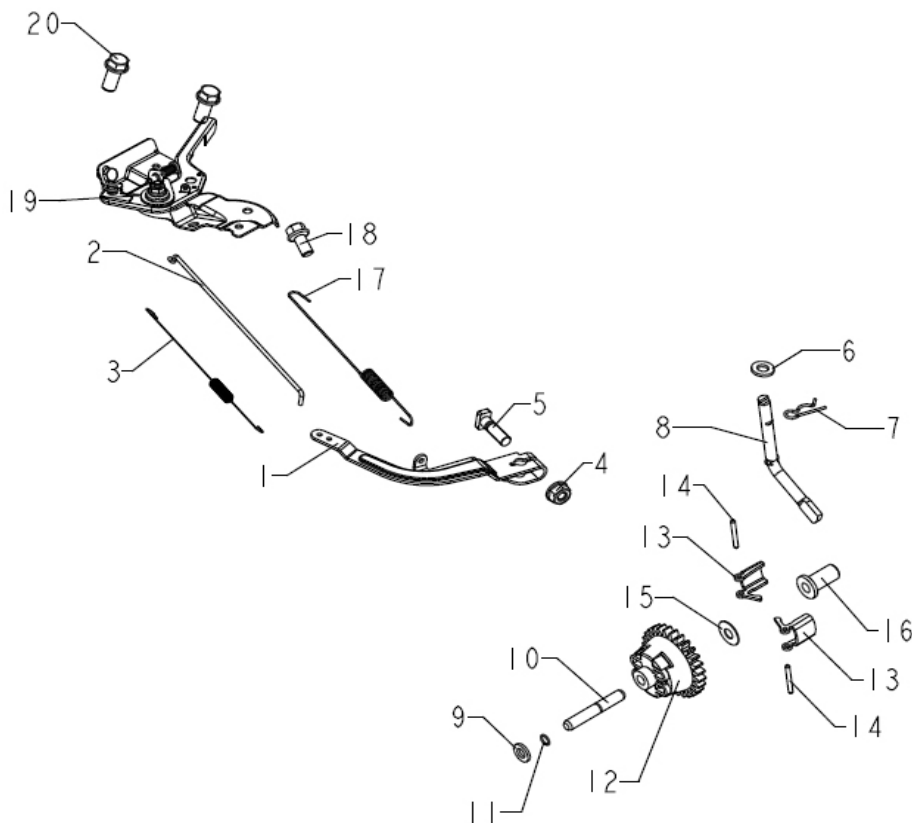

En-Fig 6:

STARTING SETS.


NO.	CODE	DESCRIPTION		QTY.	
1	QJ168QDJ. 06-05	螺钉	Screw	1	
2	QJ168QDJ. 06-06	卡簧	Circlip	1	
3	QJ168QDJ. 06-04	导板	Plate Guide	1	
4	QJ168QDJ. 06-01	离合块	Block Clutch	2	
5	QJ168QDJ. 06-02	压簧	Spring, Pressure	2	
6	QJ168QDJ. 06-03	轮盘	Table, Rotary	1	
7	QJ168QDJ. 06-07	发条弹簧	Spring, Turbination	1	
8	GB/T5789-1986	螺栓 M6*8	Bolt	3	
9	QJ168QDJ. 06. 01	起动机盖部件	Cover, Starting	1	
10	QJ168QDJ. 06-08	拉绳	Rope, Strating	1	
11	QJ168QDJ. 06-09	手柄	Handle	1	
12	JF168FJH-5. 03. 02. 01	导风罩	Cowling	1	
13	GB/T5789-1986	螺栓 M6*10	Bolt	6	
14	JF168FJH-5. 03. 01. 01	护板 1	Plate 1 Driversion	1	
15	GB/T5789-1986	螺栓 M6*20	Bolt	1	
16	QJ168QDJ. 06. 02-01	护板 2	Plate 2 Driversion	1	
17	JF168FLH-M. 06	启动拉盘组件	Start pulling plate sets	1	

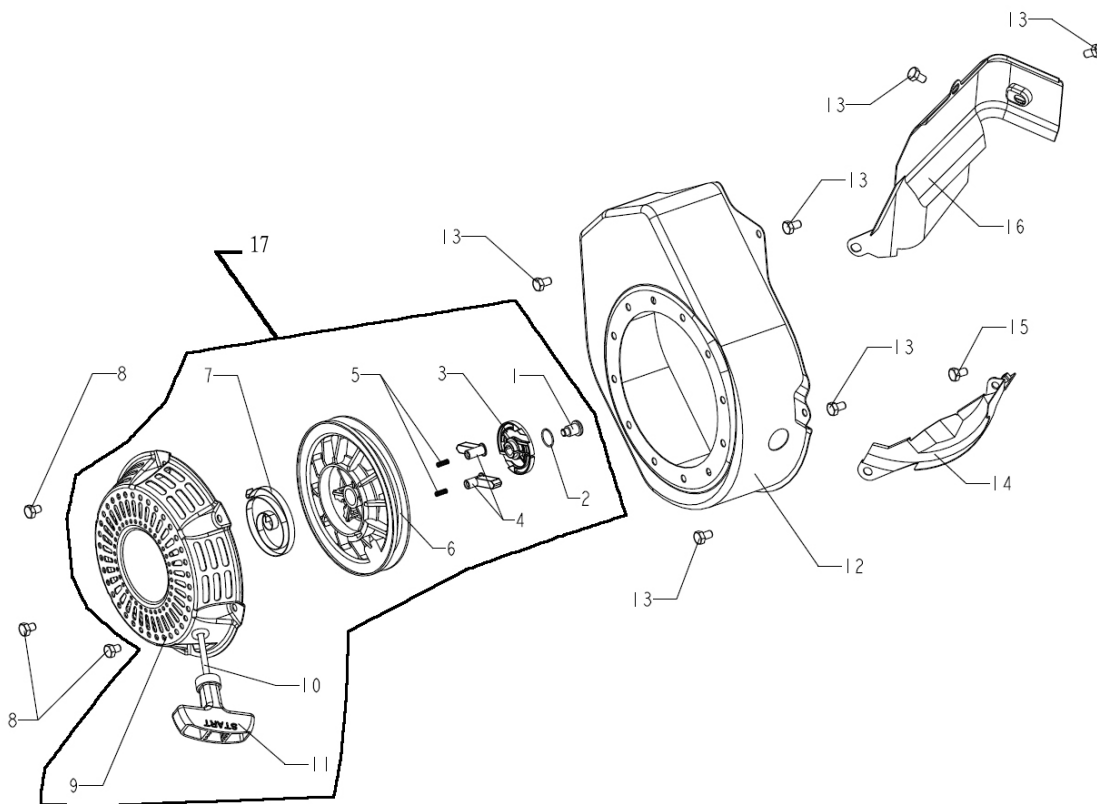

En-Fig 7:

AIR CLEANER ASSY

NO.	CODE	DESCRIPTION		QTY.	
1	GB62-88 (M6)	(蝶形) 螺母 M6	Nut	2	
2	QJ168QDJ. 07-04B	空滤器罩	Cover, Filtering	1	
3	ZJ168FJH. 07. 01. 01-02	密封垫	Seal	1	
4	ZJ168FJH. 07. 01. 01	滤芯组件	Core, Filtering	1	
5	ZJ168FJH. 07. 01-02	滤芯安装架	Bracket, Filtering	1	
6	ZJ168FJH. 07. 01-03	密封垫	Seal	1	
7	QJ168QDJ. 07. 01	下体部件	Cover, Upper Body	1	
8	QJ168QDJ. 07. 03	空滤器密封垫	Seal, Air Cleaner	1	
9	QJ168QDJ. 07-01	呼吸器胶管	Colloid Pipe	1	
10	QJ168QDJ. 07B	空气滤清器总成	AIR CLEANER ASSY	1	
11	QJ168QDL. 05	消音器总成	MUFFLER ASSY	1	
12	JF168FLH-8B. 09	化油器总成	CARBURETOR ASSY	1	
13	JF168FLH-8B. 09-01	阻风门卡夹	Bracket, choke cable comp	1	

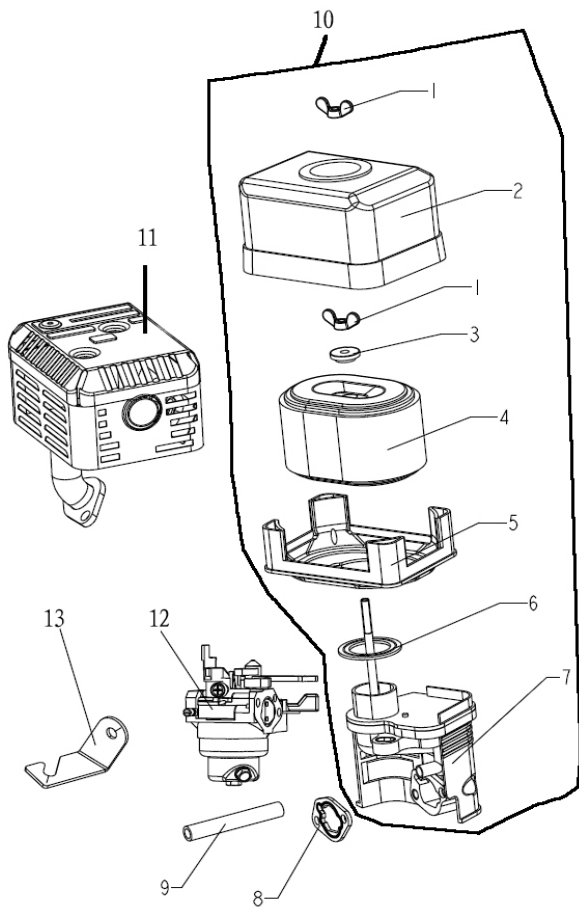

En-Fig 8:

Switch Assy,Ignition

NO.	CODE	DESCRIPTION		QTY.	
1	JF168FLH-8B. 06. 01	充电线圈	Stator comp	1	
2	QJ168QDJ. 11. 03	点火线圈部件	Ignition coil assy	1	
3	GB/T5789-1986	螺栓 M6*25	Bolt M6X25	2	
4	JF168FJH-8B. 06. 02	接地线组件	Connecting Wire Assy	1	
5	JF168FJH-5. 05. 01	起动电机	motor assy. starter	1	
6	168FJH-5. 05. 03	继电器组件	starting relay	1	
7	JF168FJH-5. 05. 03. 01	继电器连接线组件	wire, starting relay	1	
8	JF168FJH-5. 01-01	压线板	wire, fixed board	1	

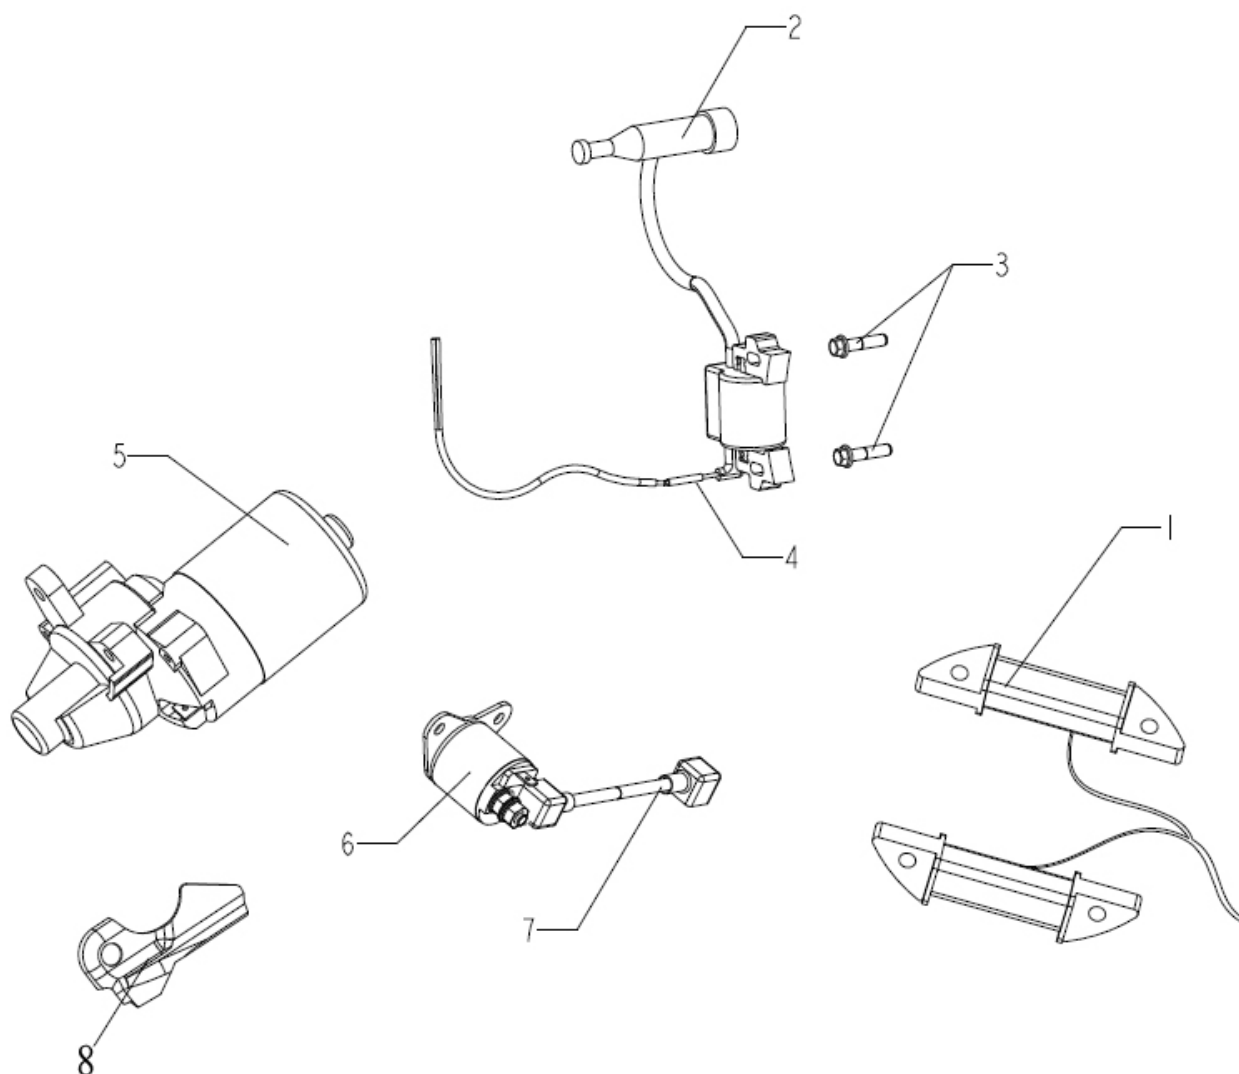


Fig 17

车架总成 FRAME GROUP

NO.	CODE	DESCRIPTION		QT Y.	
1	57100-K3	车架	FRAME COMP. (R. S. B)	1	
2	57870805512505	法兰面螺栓 M8X55	BOLT M8X55 , GB5787	9	
3	61870800012505	法兰自锁螺母 M8	LOCKING NUT M8, GB6187	4	
4	8010047250G000	R 垫	R- WASHER	12	
5	58430-K3	顶棚左边管组件	C. B. C. CUSTOM J-BAR. LSIDE (R. S. B)	1	
6	58440-K3	顶棚右边管组件	C. B. C. CUSTOM J-BAR. RSIDE (R. S. B)	1	
7	7110018080G000	φ 28 塑料管座	TUBE SEAT φ 28	2	
9	58410-K3	顶棚架	C. B. C. CUSTOM CROSS BARTOP. FR (R. S. B)	1	
10	7010017250G000	φ 25 塑料管座	TUBE SEAT φ 25	3	
11	58480-K5	后装饰杆	Rear Decorative pole (L)	2	
18	60110-K3	油门线	THROTTLE CABLE COMP.	1	
19	60120-K3	倒挡线	REVERSE CABLE COMP.	2	
20	60130-K3	风门线 (右)	CHOKE CABLE COMP (R)	1	
21	57890802510005	法兰面螺栓 M8X25	BOLT M8X29 , GB5789	3	
22	58510-K3	刹车油门支架	Brake and accelerator bracket	1	
23	58610-K3	保护杆支架	PROTECTING BAR	1	
25	58005-K3	海绵护套 1(长管)	FOAM PADDING-1	2	
26	58006-K3	海绵护套 2(顶棚后主管)	FOAM PADDING-2	2	
27	58010-K3	雨篷	BIKINI TOP	1	
28	58420-K3	顶棚后主管	Back pipe of roof	1	
29	58490-K5	后装饰杆 (右)	Rear Decorative pole (R)	1	
30	57890801610005	法兰面螺栓 M8X16	BOLT M8X16 , GB5789	8	
31	65042-K2	后货架盖板	Rear Shelf cover	1	
32	ST5. 5X10	自攻螺钉 ST5. 5X10	BOLT ST5. 5X10	4	
33	58007-K3	卡箍	Clamps	4	
34	7020012250G000	脚踏垫	RUBBER FOOLPLAIE	4	

FIG.17

FRAME GROUP

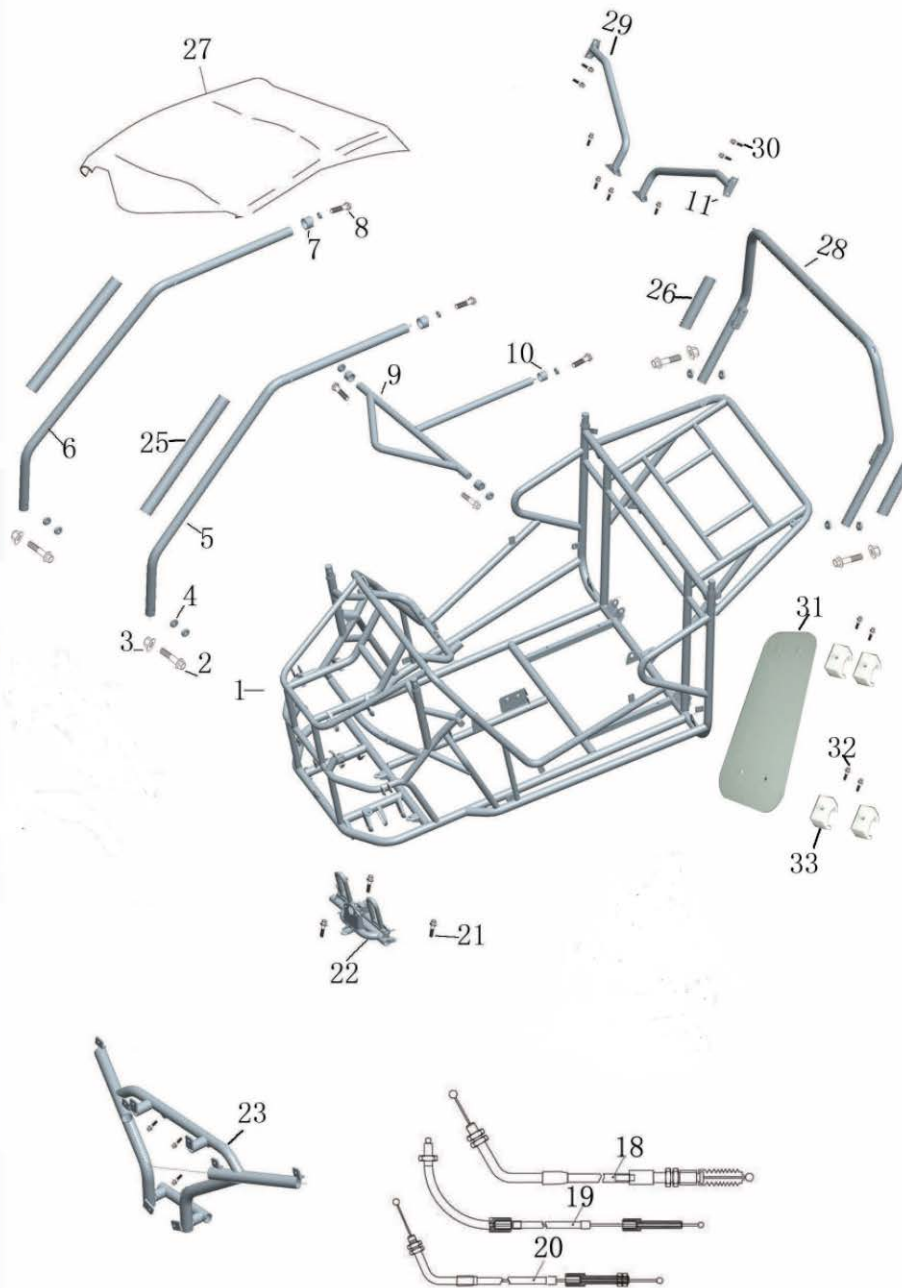


Fig 18:

方向系统 STEERING SHAFT ASSY

NO.	CODE	DESCRIPTION		QT Y.	
1	7010056080G000	方向盘罩	STEERING BOLT COVER	1	
2	61870600010006	自锁螺母 M6	LOCKING NUT M6	9	
3	7020057080G000	方向盘	STEERING WHEEL	1	
4	60010-K3	方向盘操纵杆	STEERING-SHAFT	1	
5	57830601610005	GB5783 六角头螺栓 M6X16	GB5783 BOLT M6 x16	3	
6	60200-K3	方向机总成	STEERING GEAR ASSY	1	
7	81800501410001	GB818 十字盘头螺钉 M5X14	GB818 BOLT M5 x12	2	
8	8010079080G700	转向器轴套	connecting pipe	1	
9	7010007080G000	转向器衬套	STEERING GEAR BUSH	2	
10	8010075080G200	转向器齿条	gear axle	1	
11	6000180080G200	转向器球头座	STEERING BALL JOINT	2	
12	61710800012505	GB6170 六角螺母 M8	GB6170 nut m8	2	
13	60001-K3	横拉杆	TIE ROD	2	
14	61700800012505 (L)	GB6170 六角螺母 M8 (左旋)	GB6170 nut m8 (L)	2	
15	6000181080G000	拉杆球头	ROD END	2	
16	8000002080G000	横拉杆总成	TIE ROD ASSY	2	
18	8010131080G300	转向器齿轮	STEERING GEAR	1	
19	4010001080G000	连接座、盖	Connecting device、COVER	1	
20	57870602010005	GB5787 法兰面螺栓 M6X20	GB5787 BOLT M6 x20	4	
21	7020059080G000	转向器防尘罩	STEERING BALL JOINT DUST COVER	2	
22	61871000012502	尼龙自锁螺母 M10*1.25	LOCKING NYLON NUT M10*1.25	1	
23	8020130080G000	方向器支架	STEERING GEAR BRACKET (R. S. B)	2	
24	61870800012505	法兰自锁螺母 M8	NUT M8	2	
25	7020043080G000	刹车踏垫	BRAKE PEDAL PAD	1	
26	7020044080G000	油门踏垫	THROTTLE PEDAL PAD	1	
27	70000801612505	GB70 内六角柱头螺钉 M8X16	GB70 BLOT M8X16	1	
28	9500218080G000	油门踏板焊接组件	THROTTLE PEDAL COMP	1	
29	87910300160000	弹性圆柱销 $\Phi 3 \times 16$	ROLL PIN $\Phi 3 \times 16$	2	
30	8040010080G000	左扭簧 (左刹车回位弹簧)	THROTTLE PEDAL RETURN SPRING, L	1	
31	8040011080G000	右扭簧 (右油门回位弹簧)	BRAKE PEDAL RETURN SPRING, R	1	
32	7010003250G000	衬圈 (塑料) (上摇架衬套)	PEDAL BUSH	4	
33	4000044080G000	刹车踏板焊接组件	BRALE PEDAL COMP.	1	
34	8010123080G000	油门刹车踏板轴	PEDAL BOLT	1	
35	87910300200000	弹性圆柱销 $\Phi 3 \times 20$	ROLL PIN $\Phi 3 \times 20$	1	
36	57820806512505	六角头螺栓 M8X65	BOLT M8X65	1	
37	7010022080G000	橡胶限位块 (油门踏板缓冲块)	rubber food pedal stop	1	
38	8020209080G000	驻车刹车片	Stopping plate	1	
39	57830801812502	螺栓 M8X18 (80 驻车片专用)	GB5783 BOLT M8X18	1	
40	97000800000005	平垫 GB97 $\Phi 8$	GB97 WASHER $\Phi 8$	1	
41	61700800012505	GB6170 螺母 M8	GB6170 NUT M8	2	
42	GB911503000002	开口销 $\Phi 1.5 \times 30$	COTTER PIN	1	
43	88200602800003	圆柱销 $\Phi 6 \times 28$	LOCKING ROLL PIN	1	

44	8020224080G000	制动顶针支架	CYIINDER ROD BRACKET	1	
45	7020076080G000	制动泵防尘套	DUST COVER	1	
46	6000000080G000	液刹总成	Hydraulic brake assembly	1	
47	6000010080G000	油管	BRAKE HOSE ASSY	1	
48	6000306080G000	制动泵顶针	CYIINDER ROD	1	
49	61700600010001	GB6170 六角螺母 M6	GB6170 NUT M6	1	
50	9700004080G000	油管接头螺栓 M10X24	bolt M10X24	2	
51	9300010080G000	油管密封垫 $\phi 10$	washer $\phi 10$	4	
52	6000305080G000	制动泵	MASTER CYLIND ER	1	
54	57890602510005	GB5789 螺栓 M6X25	GB5789 BOLT M6X25	2	

FIG.18

PARTS MANUAL

STEERING SHAFT ASSY.

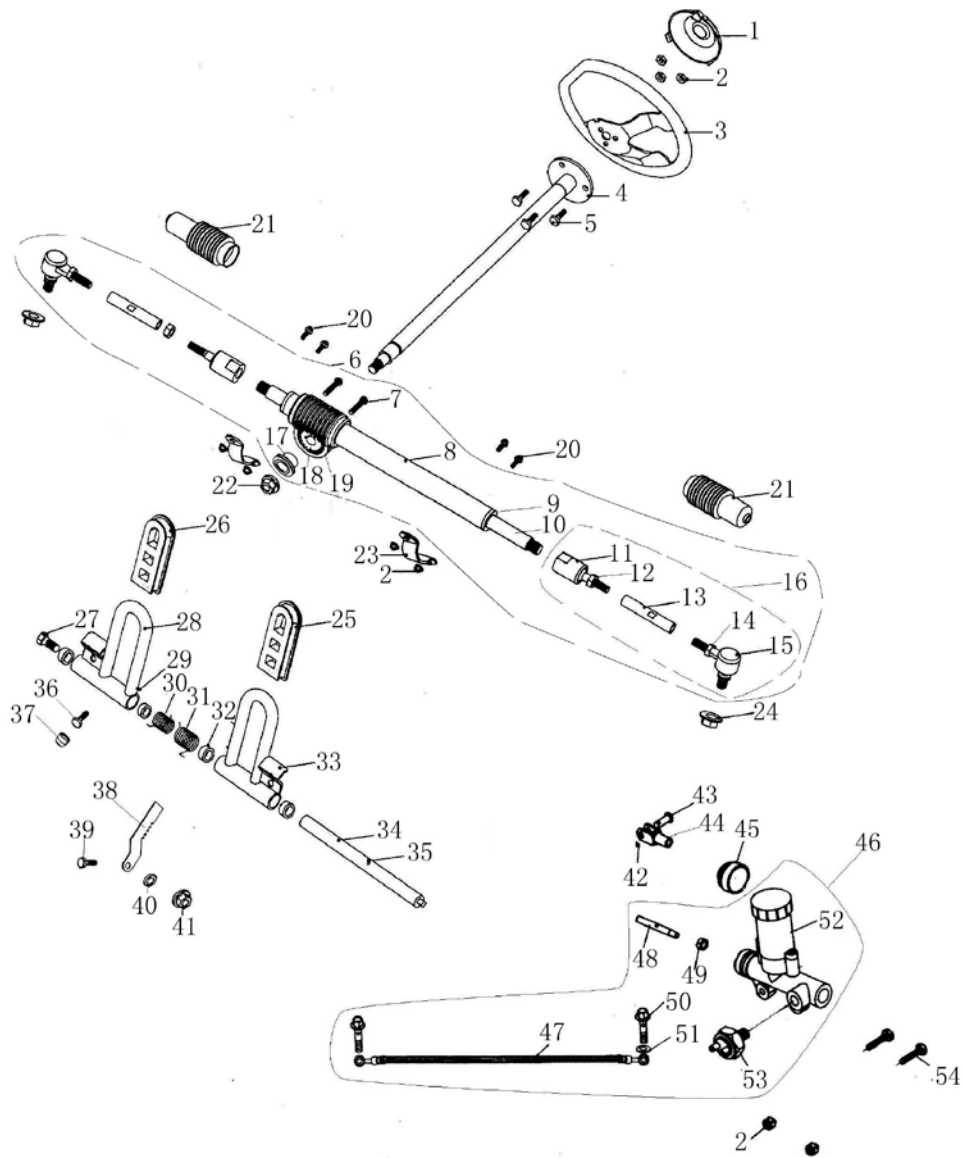


Fig 19:

悬挂臂总成 SUSPENSION ARM ASSY

NO.	CODE	DESCRIPTION		Q T Y.	
1	GB5789 M10 x 145	GB5789 螺 栓 M10x1.25X145	GB5789 BOLT M10 x 145	2	
2	7010003250G000	衬套（塑料）（上摇架衬套）	UPPER SUSPENSION ARM BUSH	8	
3	8010015-K5	上摇架衬管	UPPER SUSPENSION ARM COLLAR	2	
4	58210-K3	上摇架焊接组件	UPPER SUSPENSION ARM	2	
5	61870800012505	GB6187 法兰自锁螺母 M8	GB6187 LOCKING FLANGE UNT.M8	4	
6	57871004012505	GB5787 法 兰 面 螺 栓 M10X1.25X40	GB5787 FLANGE BOLT M10 x 40x1.25	4	
7	61871000012505	GB6187 法 兰 自 锁 螺 母 M10X1.25	GB6187 LOCKING FLANGE M10X1.25	4	
8	94571000012505	GB9457 开 槽 螺 母 M10X1.25	GB9457 NUT M10*1.25	4	
9	GB9125030000002	GB91 开口销 ϕ 2.5X30	COTTER PIN ϕ 2.5X30	6	
10	44220-K3	左摇臂焊接组件(转向柱 L)	SPINDLE AND STRUT SUPPORT, L	1	
11	43100-K3	前减震器	CUSHION ASS Y. FR	2	
12	GB5789 M10 x 205	M10x1.25X205	FLANGE BOLT M10x1.25x205	2	
13	58220-K3	下摇架焊接组件	LOWER SUSPENSION ARM ASS Y	2	
14	7020061080G000	转向臂防尘套(球头防尘套)	BALL HEAD DUST SEAL	4	
15	44210-K3	右摇臂焊接组件(转向柱 R)	SPINDLE AND STRUT SUPPORT, R	1	
16	6004-2RS	轴承 6004	Bearing 6004	2	
17	6000309080G000	左前轮总成	FRONT WHEEL ASS Y. L.	1	
18	7020078080G000	前轮胎18x7-8	Front tire 18x7-8	2	
19	6100310080G000	前轮钢圈	RIM, FR	2	
20	7190018080G000	气门嘴	Air valve	2	
21	6100321080G000	右前轮组件	FRONT WHEEL ASSY. R.	1	
22	8010084080G000	前轮毂隔套	Collar	2	
23	6004-2RS	轴承 6004	Bearing 6004	2	
24	94571200012505	开槽螺母 M12X1.25	NUT M12	2	
25	7020039250G000	轮毂罩	HUB COVER FR	2	
26	8.010.014-K3	下摇架衬管	LOWER SUSPENSION ARM COLLAR	2	

FIG.19

SUSPENSION ARM ASSY.

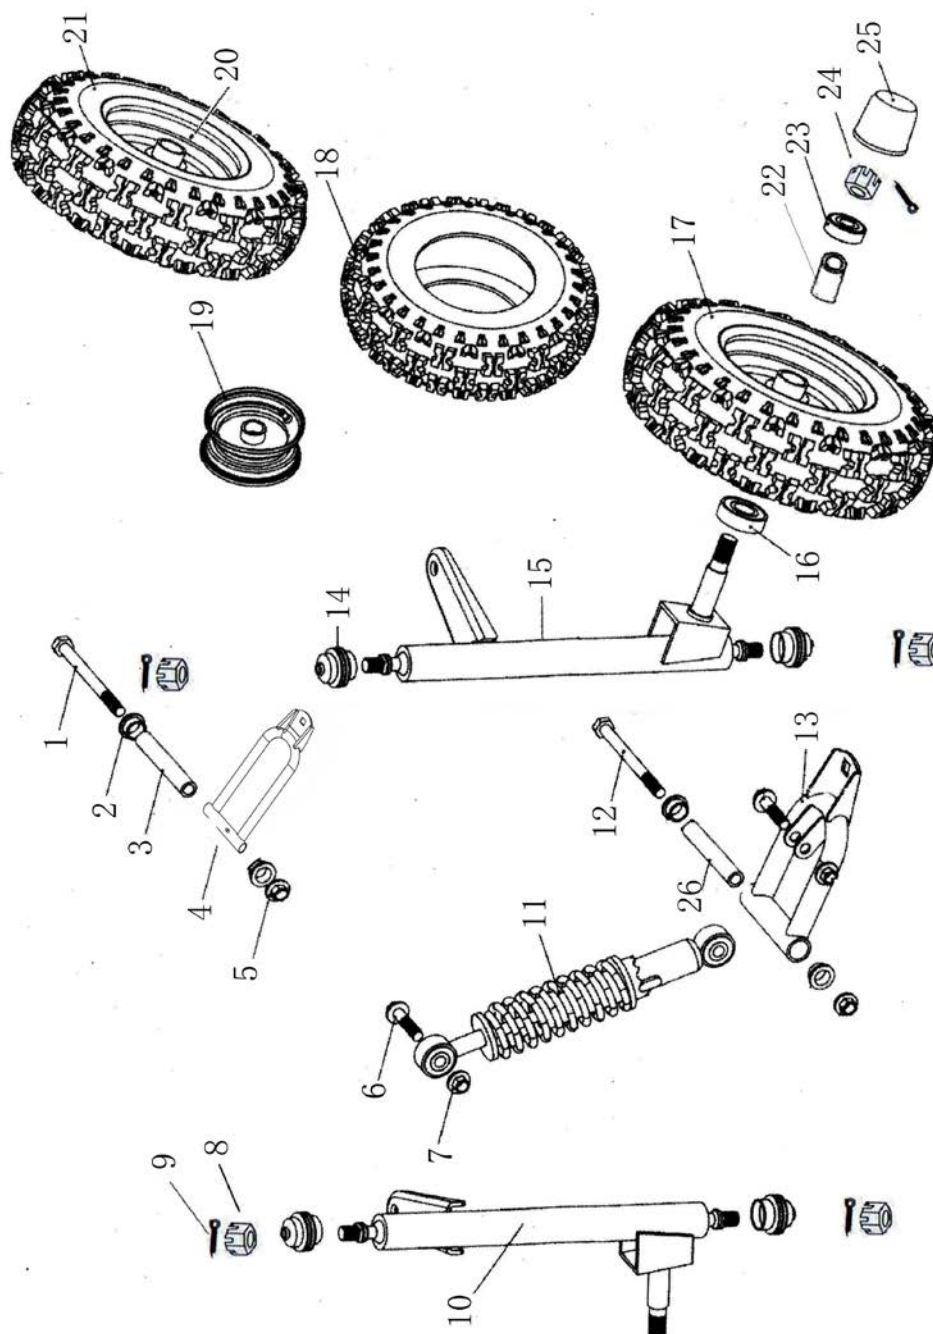


Fig 20:

倒档箱总成 Reverse gear box ASSY

NO.	CODE	DESCRIPTION		QT Y.	
1	58330-K3	发动机安装支架	ENGINE MOUNTING PLATE-METALLIC	1	
2	57871017012505	螺栓 M10X1.25X170	BOLT M10X1.25X170	1	
3	61871000012505	螺母 M10X1.25	LOCKING NUT M10X1.25	6	
4	58340-K3	发动机固定支架	Engine mounting bracket	1	
5	61870800012505	螺母 M8X1.25	LOCKING NUT M10X1.25	8	
6	58360-K3	减震块	Damping block	3	
7	57871012012505	螺栓 M10X1.25X120	BOLT M10X1.25X180	2	
9		倒档器	Reverse gear box	1	
10	57870808012505	螺栓 M10X1.25X60	BOLT M10X1.25X60	2	
12	58301-K3	后吊架衬管	MOUNT LINK COLLAR	2	
13	58302-K3	后吊架尼龙套	MOUNT LINK CUSHION	2	
15	8110021080G001	双孔链条罩	DRIVE COVER PLASTIC	1	
16	58350-K3	链条罩固定座	CLUTCH COVER MOUNTING PLATE	1	
17	57890601210005	法兰面螺栓 M6X12	FLANGE LOCKING NUT M6X12	4	
18	7.020.077	减震套 $\phi 10 \times \phi 30 \times 30/35$	SHOCK ABSORBING BUSHING $\phi 10 \times \phi 30 \times 30/35$	2	
19	58050-LA	发动机吊架固定座	ENGINE PYLON FIXED	1	

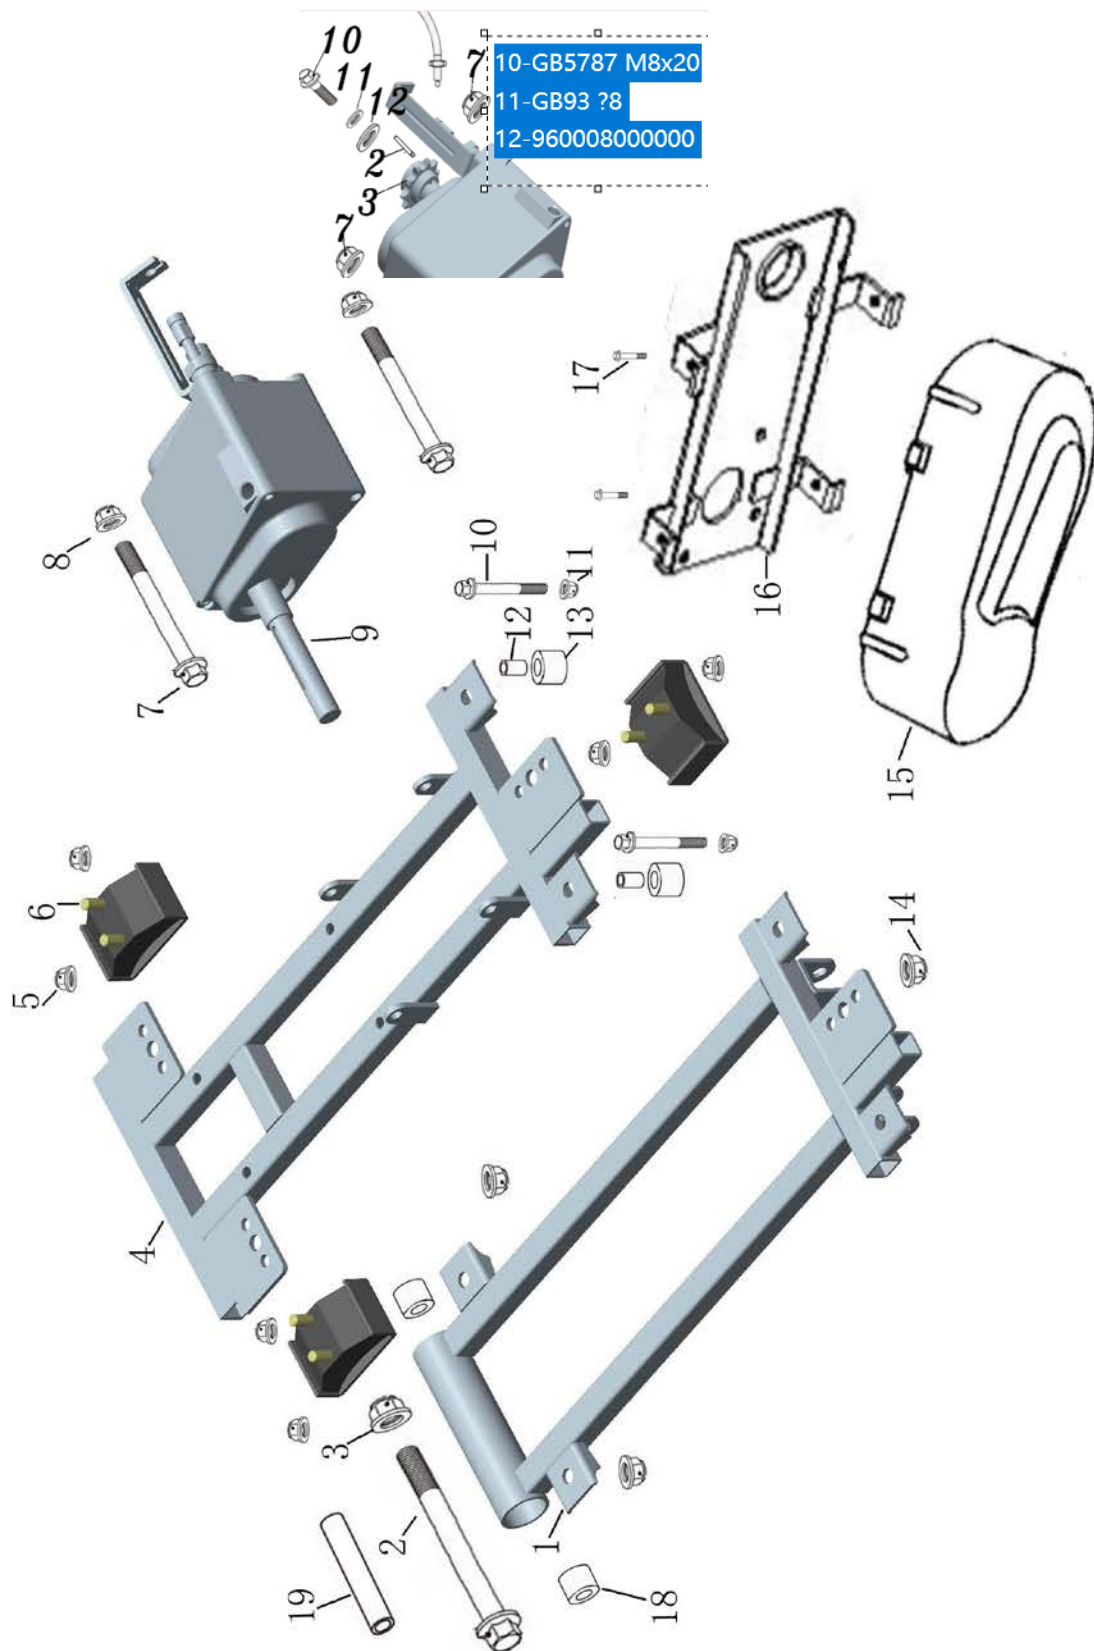


Fig 21:

后轮系统

REAR HOUSING

NO.	CODE	DESCRIPTION		QT Y.	
1	7020039250G000	轮毂罩	HUB COVER, RR	2	
2	GB913003000002	开口销 $\Phi 3 \times 30$	COTTER PIN 3x40	2	
3	94571600015005	开槽螺母 M16X1.5	CASTLE NUT M16	2	
4	96001600000005	GB96 垫片 $\Phi 16$	GB96 WASHER $\Phi 16$	2	
5	6000315080G000	右后轮总成	REAR WHEEL ASSY R.	1	
6	8010199080G000	后轮轴	REAR AXLE	1	
7	57890801612505	法兰面螺栓 M8X16	FLANGE BOLT M8 x1.25x16	6	
8	5801000110G000	后轮轴承压板	AXLE COVER	2	
10	60052RS0000000	轴承 6005	BEARING, 6005	2	
11	70000802012505	内六角柱头螺钉 M8X20	FLANGE BOLT M8x20	8	
12	8010201080G000	后制动盘	DISC BRAKE, RR	1	
13	8010202080G000	链轮安装座	REAR AXLE HUB	1	
14	8010200080G000	60 齿链轮	REAR SPROCKET	1	
15	9110020080G000	链轮座拧紧螺钉 M10X1.25X20	BOLT M10x1.25x25	1	
16	420-62	62 节 420 链条	DRIVE CHAIN	1	
17	JT-420	链条接头	MASTER LINK	1	
18	6000316080G000	左后轮总成	REAR WHEEL ASS Y.L	1	
19	7190018080G000	气门嘴	Air valve	2	
20	6100333080G000	后轮钢圈	RIM, RR	2	
21	7020078080G000	后轮胎 16x7-8	REAR TIRE 16x7-8	2	

后轮胎18x7-8

Rear tire 18x7-8 note: same as front tire

FIG.21

REAR HOUSING

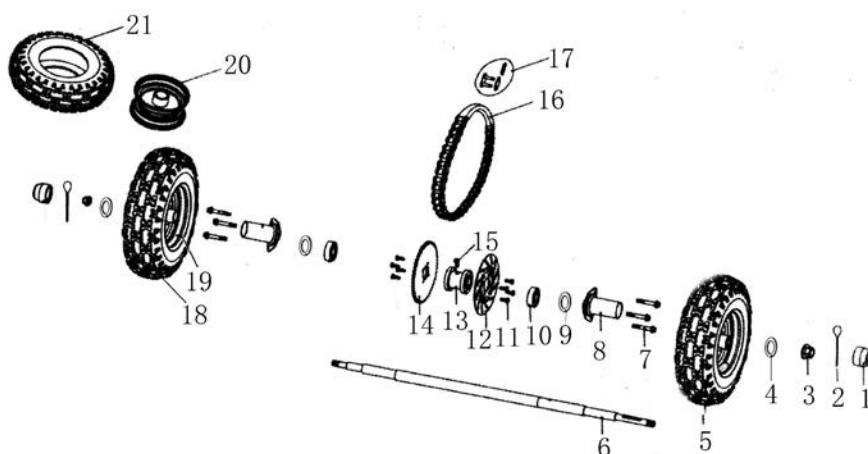


Fig 22:

后摆臂

REAR SWING ARM

NO.	CODE	DESCRIPTION		QTY.	
1	61871000012505	M10X1.25 自锁螺母	LOCKING FLANGE NUT M10×1.25	4+4	
2	57891004012505	法 兰 面 螺 栓 M10X1.25X40	FLANGE BOLT M10×1.25×40	6	
3	63100-K3	后减震器	CUSHION ASSY. RR	2	
4	58230-K3	左后泥板支架	REAR FENDER BRACKET. R	1	
5	6000382250G000	电瓶 YTX12-BS	BATTERY 12V 12AH	1	
6	7020023250G000	电瓶拉条	BATTERY STRAP	1	
7	58310-K3	后吊架	REAR SWING ARM	1	
8	61701600015005	六角螺母 M16X1.5	NUT M16X1.5, GB6170	1	
9	58301-K5	M16 螺套	Threaded sleeve	2	
10	58310-K5	万向球	LINKAGE KNUCKLE	1	
11	94571200012505	开槽螺母 M12X1.25	CASTLE NUT M12X1.5, GB9457	1	
12	GB912503000002	开口销 ϕ 2.5X30	COTTER PIN ϕ 2.5×30, GB91	1	
13	57890801610005	法兰面螺栓 M8X16	FLANGE BOLT M8×16	2	
14	58240-K3	右后泥板支架	REAR FENDER BRACKET. L	1	
15	54501-K3	后挡泥板	FENDER	2	
16	61770600010005	M6 法兰螺母	FLANGE NUT M6 GB6177	6	
17	57890601610005	法兰面螺栓 M6X16	FLANGE BOLT M6×16	6	
18	7020016250G000	制动蹄片	RR. BRAKE PAD SET	1	
19	GB70 M8X12	内六角柱头螺钉 M8X12	BOLT M8X12	2	
20	GB93 ϕ 8	弹垫 ϕ 8	SPRING WASHER ϕ 8	2	
21	6000028250G000	80 后制动分泵 (250 左前制动卡钳)	RR. CALIPER ASSY.	1	
22	61871200012505	自锁螺母 M12X1.25	NUT M12X1.25	1	
23	96001200000005	垫片 ϕ 12	WASHER ϕ 12	2	
24	61701200012505	六角螺母 M12X1.25	NUT M12X1.25	1	
25	8.010.041-K3	调节器衬套	BUSHING-CHAIN ADJUSTER	1	
26	61871000012505	法 兰 自 锁 螺 母 M10X1.25	FLANGE LOCKING NUT M10X1.25	1	
27	8147008080G000	链条调节器	CHAIN ADJUSTER	1	
28	7010028250G000	电瓶盖	BATTERY COVER	1	
29	7020020250G000	电瓶垫	LOWER BATTERY CUSHION	1	
30	58050-K3	后吊架拉紧带	Limiting band	2	
31	44001-K3	台阶螺栓	FLANGE BOLT	4	

FIG.22

REAR SWING ARM

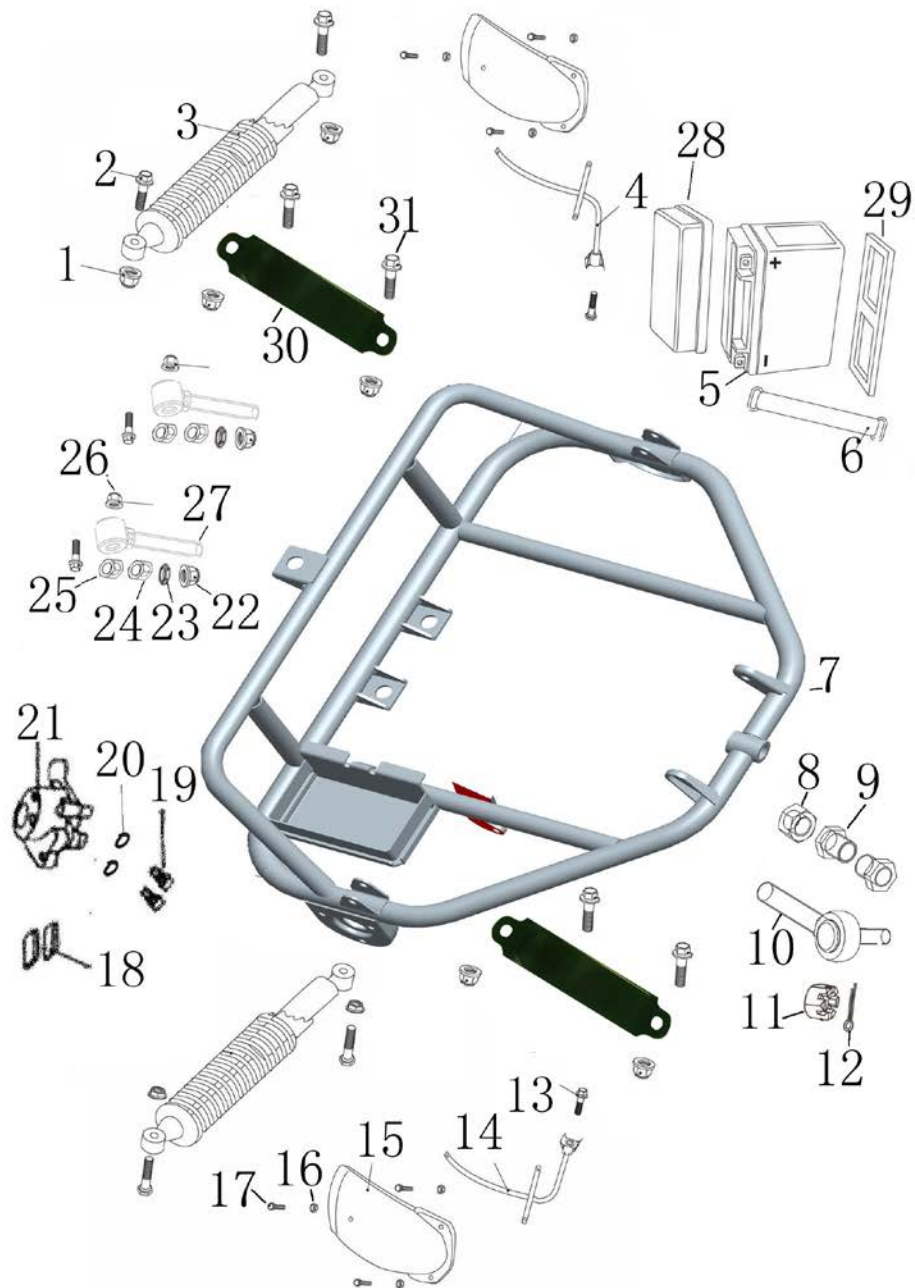


Fig 23: 线束 / 电气 / 座椅 / 发动机 WIRE HARNESS/ELECTRICAL/SEAT/ENGINE

NO.	CODE	DESCRIPTION		QTY.	
1	6100167080G000	整流器（稳压器）	RECTIFIER COMP. REGULATE	1	
2	61770600010005	法兰螺母 M6	NUT M6	1	
3	57890601610005	法兰面螺栓 M6X16	bolt M6X16	2	
4	91010-K3	熄火开关	ENGINE STOP SWITCH	1	
5	80031-K5	喇叭开关	HORN switch	1	
6	80032-K5	转向灯开关	TURN SIGNAL LAMP switch	1	
7	80033-K5	大灯开关	headlamp switch	1	
8	80034-K5	熄火开关	ENGINE STOP SWITCH	1	
9	80035-K5	电门锁	Ignition switch	1	
10	9. 700. 001	安全带专用螺栓、螺母	SAFETY BELT SPECIAL BOLT	4	
12	57891002012505	GB5789 法兰螺栓 M10*1. 25*20	FLANGE BOLT M10*1. 25*20, GB5789	1	
13	61871000012505	GB6187 法兰自锁螺母 M10*1. 25	GB6187 LOCKING FLANGE UNT. M10*1. 25	1	
14	6000328080G000	(K3) 安全带	SAFETY BELT	1	
15	61000-K5	K5 座椅总成	SEAT ASSY	1	
16	51300-K5	座椅靠背	SEAT back	2	
17	51100-K5	座椅副座	SEAT COMP. R	1	
18	51220-K5	主座椅滑座	DRIVER SEAT SLIDER	1	
19	51200-K5	座椅主座	SEAT RALL SET	1	
20	57870801612503	螺栓 M8*16	bolt M8X16	2	
21	61770800012505	法兰面螺母 M8	FLANGE NUT M8	2	
22	57870804012505	法兰螺栓 M8X35	bolt M8X35	2	
23	6000313080G000	电缆线	WIRE HARNESS	1	
24	4000030080G000	油箱总成	FUEL TANK COMP	1	
25	168N080080G000	出油口	FUEL TANK JOINT	1	
26	168N090080G000	O 形环	O-RING (14mm)	1	
27	61870600010005	法兰自锁螺母 M6	NUT M6	2	
28	5000100080G000	00A 减震垫	00A RUBBER MOUNT	2	
29	621A0800000000	卡环 φ8（油管卡箍）	HOSE CLAMP φ8	1	
30	93000600000005	弹垫 6	LOCK WASHER φ8 , GB93	1	
31	57870603010005	螺栓 M6X30	bolt M6X30	1	
32	6000145080G000	油箱盖	FUEL FILLER CAP COMP	1	
33	1000000080G000	80 电 动 发 动 机 (JF168FLH-8C)	ENGINE COMP.	1	
34	12111208034	扎带 200	Ligature band 200	15	
35	8120000080GA00	1021 钮子开关（大灯开关）	ENGINE STOP SWITCH	1	
36	10220-K3	风门线支架	Throttle support	1	
37	8006000300K000	反射体（红、方）	REAR REFLECTOR	1	
38	97000500000005	φ5 平垫	GB97 WASHER φ5	1	
39	61700500010005	GB6170 六角螺母 M5	GB6170 NUT M5	1	
40	GB5789	法兰面螺栓 M6X12	FLANGE BOLT M6X12	1	
41	80036-K5	高音喇叭（卡丁车12V）	HORN	1	

FIG.23

WIRE HARNESS/ELECTRICAL/SEAT/ENGINE

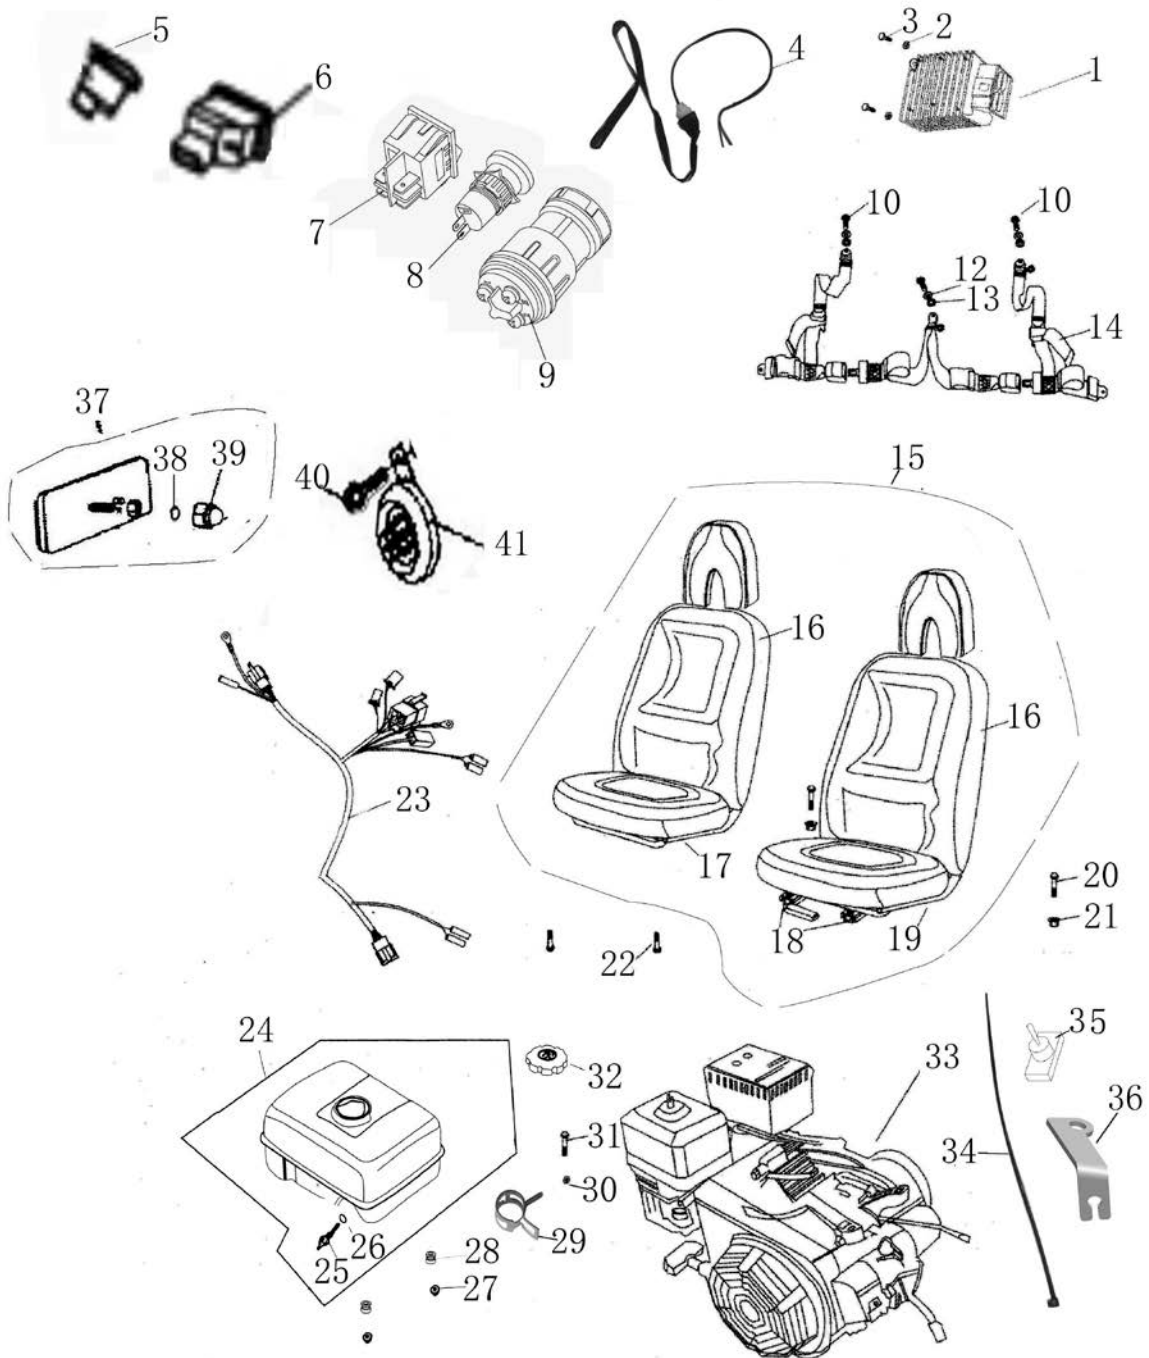


Fig 24

覆盖件 PLASTIC PLATE

NO.	CODE	DESCRIPTION		QT Y.	
1	65101-K5	保护杆右装饰件	Protection rod cover (R)	1	
2	65102-K5	保护杆左装饰件	Protection rod cover (L)	1	
3	65103-K5	左装饰件	Decorative parts (L)	1	
4	65104-K5	前装饰件	Decorative parts (F)	1	
5	65105-K5	右装饰件	Decorative parts (R)	1	
6	81100-K5	右前灯	Headlights (R)	1	
7	GB6170	六角螺母 M6	GB6170 NUT M6	4	
8	81300-K5	左前灯	Headlights (L)	1	
9	65106-K5	前大板	Front cover	1	
10	65107-K5	左侧板	Left cover	1	
11	9. 116. 006	膨胀螺钉M6	BULGE BOLT	15	
12	65108-K5	面板	cover	1	
13	65109-K5	右侧板	Right cover	1	
15	65112-K5	面板装饰件	Decorative cover	1	
16	GB2823	自攻螺钉 ST3. 2x8	BOLT ST3. 2X8	23	
19	65122-K5	开关板	Switch board	2	
20	GB9074. 6	螺钉 M6X16	BOLT M6X16 , GB9074. 6	2	
25	65032-K5	前网板	Front decoration cover	1	
26	GB5787	螺栓 M6X20	BOLT M6X20 , GB5787	8	
27	GB5787	螺栓 M6X8	BOLT M6X8 , GB5787	4	
28	GB5787	螺栓 M6X12	BOLT M6X12 , GB5787	18	

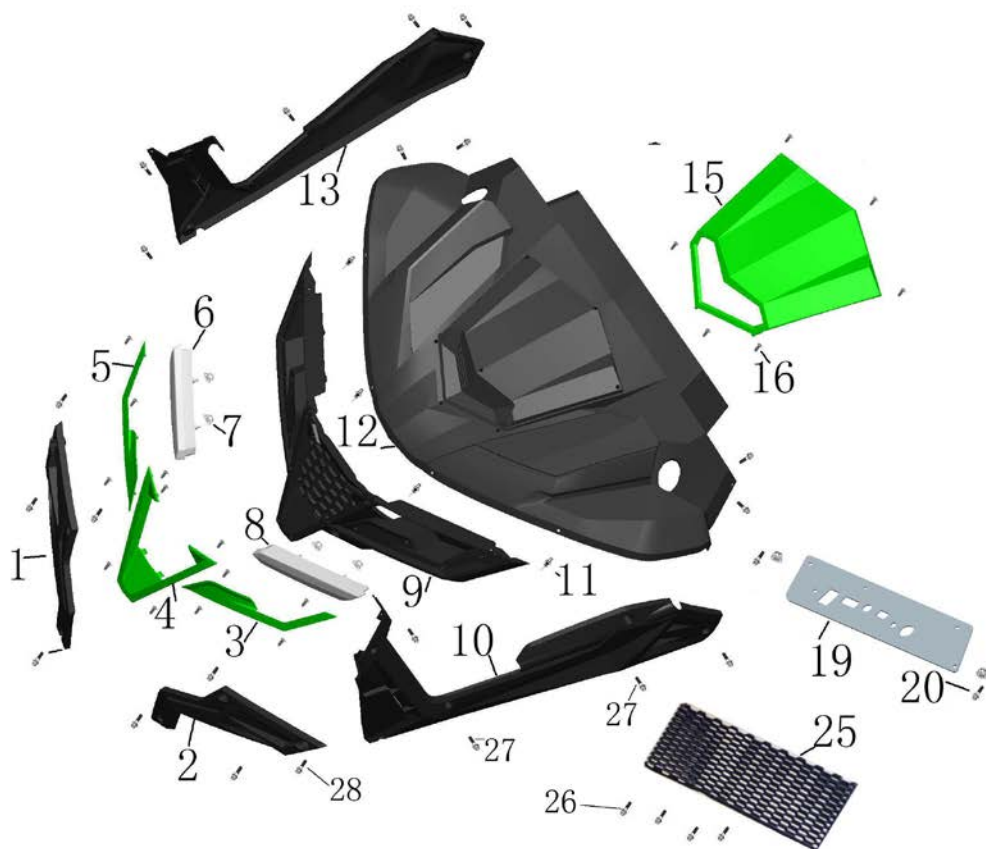


FIG.25

离合器系统

CVT

NO.	CODE	DESCRIPTION		QTY.	
1	9.500.001	前离合器总成（带轴承）	FRONT CLUTCH 80T	1	
2	8.146.098	主固定盘	SHEAVE, STATIONARY	1	
4	8.147.000	主滑动盘	SHEAVE, MOVEABLE	1	
5	8.147.001	轴环（轴承状态）	HUB	1	
6	8.147.002	凸轮	DRUM	1	
7	9.300.008	压紧衬套	BUSHING BOLCK	1	
8	GB5787	法兰面螺栓 M8X40	BOLT, M8X40	1	
9	9.100.018	皮带	BELT	1	
10	10011-LA	前离合器内隔套	COLLAR $\Phi 30 \times \Phi 20 \times 18$	1	
11	9.500.010	后离合器	DRIVEN PULLEY	1	
12					

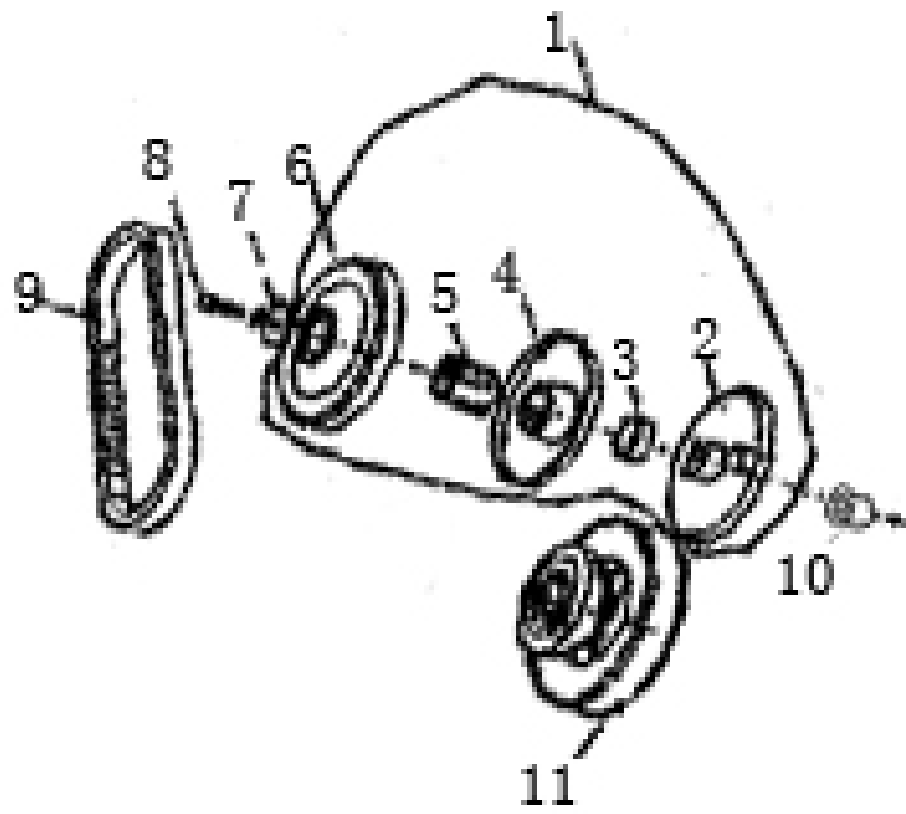


Fig 26: 后摆臂上摆臂 REAR SWING ARM ASSY.UPPER

NO.	CODE	DESCRIPTION		QTY.	
1	GB912503000002	开口销 ϕ 2. 5X30	COTTER PIN ϕ 2. 5 $\times$ 25, GB91	1	
2	94571200012505	开槽螺母 M12X1. 25	CASTLE NUT M12X1. 25, GB9457	1	
3	58310-K5	万向球	LINKAGE KNUCKLE	1	
4	58301-K5	M16 螺套	Threaded sleeve	2	
5	61701600015005	六角螺母 M16X1. 5	NUT M16X1. 5, GB6170	1	
6	58320-K5	后吊架连接架	Bracket connecting frame	1	
7	GB5789	法兰面螺栓 M10 $\times$ 1. 25 $\times$ 68	FLANGE BOLT M10 $\times$ 1. 25 $\times$ 68	2	
8	58720N	缓冲套	CUSHION BUSH	2	
9	GB6187	法兰自锁螺母 M10 $\times$ 1. 25	LOCKING FLANGE NUT M10 $\times$ 1. 25	2	
29	6000042150G000	手刹杆	PARKING BRAKE LEVER ASSY	1	
30	81800501210005	十字盘头螺钉 M5X12	BOLT M8X16 ,GB578	1	
31	97000500000005	平垫 ϕ 5	NUT M8 ,GB6187	1	
32	7020024150G000	手刹保护罩	Hand brake protection cover	1	
33	57870802012505	法兰面螺栓 M8X20	FLANGE BOLT M8X20	2	
34	8040004150G000	手刹弹簧	PARKING BRAKE CABLE SPRING	1	
35	61870800012505	自锁螺母 M8	LOCKING FLANGE NUT M8	2	

FIG. 21

REAR SWING ARM ASSY. UPPER

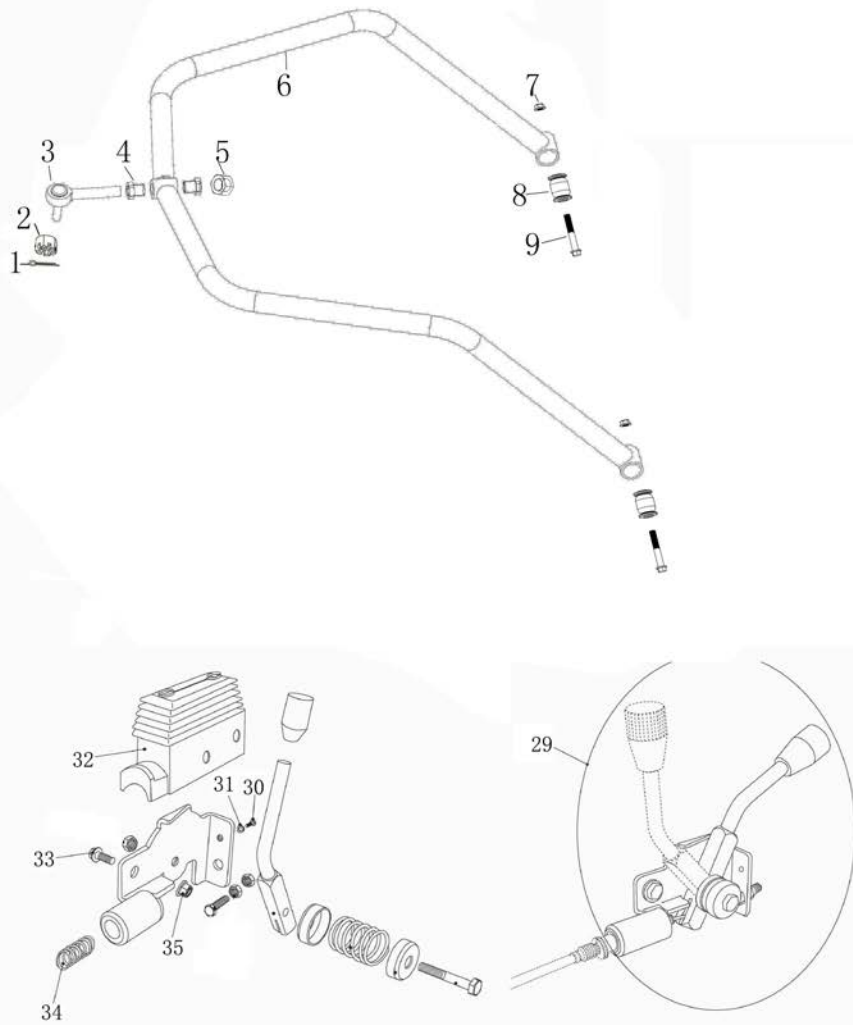


Fig:27 警告贴纸总成 WARNING STICKERS ASSY

NO.	CODE	DESCRIPTION	QTY.	
1	9072100080G000	80 卡丁车 1 号警告贴花（年龄警告贴花）	1	
2	9072100050G000	50 卡丁车 1 号警告贴花（严禁长发警告贴花）	1	
3	9072200050G000	50 卡丁车 2 号警告贴花（综合警告贴花）	1	
4	9072300050G000	50 卡丁车 3 号警告贴花（链罩警告贴花）	1	
5	9072400050G000	50 卡丁车 4 号警告贴花（乘员超载警告贴花）	1	
6	9072500050G000	50 卡丁车 5 号警告贴花（严禁上路警告贴花）	1	
7	9072700050G000	50 卡丁车 7 号警告贴花（严禁攀爬警告贴花）	1	
8	9072900050G000	50 卡丁车 9 号警告贴花（MIDE IN CHINA 贴花）	1	
9	9073000050G000	50 卡丁车 10 号警告贴花（安全带警告贴花）	1	
10	9090200080G0D0	EPA 防伪标贴	1	
11	9077200080G0A0	MID XRX EPA 挂牌	1	
12	9077100-K3	K3 说明书	1	
13				
14				
15				
16				
17				
18				
19				
20				
21				



1



2



3



4



5



6




7



8



9

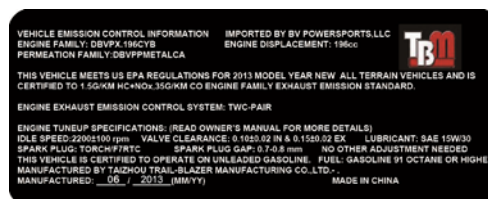

10

